

STANDARD PC RANGE


PC-F1A INSTALLATION GUIDE

PC-F1A Self Tapping Female


PC-F1A	USE WITH:				INSTALL WITH:			
	PC-M1B	PC-VM1	PC-M2H	PC-VMX	CT-01	CT-07	CT-03	CT-10
	PC-SM2	PC-SVMX	PC-SM2H	PC-SM1AC				
								

INSTALLATION STEPS FOR UPHOLSTERED PANELS


- 1** Drill hole through panel and frame

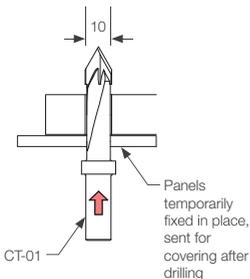

- 2** Drill out frame hole with CT-07

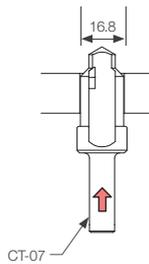


- 3** Screw fit PC-F1A with CT-03. Use battery drill with clutch set.

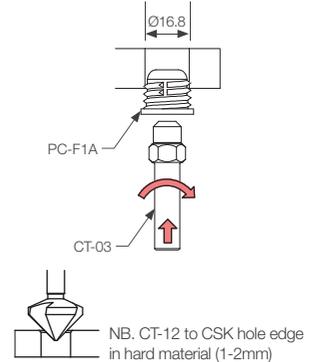


- 4** Screw fit PC-F1A into thin frame

PC-F1A can be used as screw / friction fit into thin frames and seat backs

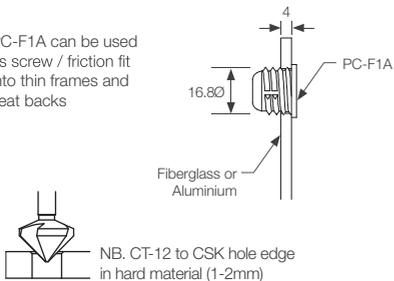

- 5** Cutaway view showing panel mounting

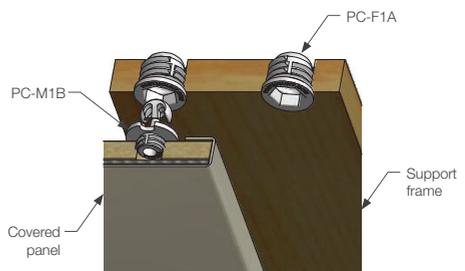

STANDARD PC RANGE


PC-F1A INSTALLATION GUIDE

PC-F1A Self Tapping Female




INSTALLATION STEPS FOR PAINTED OR PREFINISHED PANELS (First complete steps 1 to 3, page 1)


- 1** Fit CP-01ST into PC-F1A then push panel to mark center

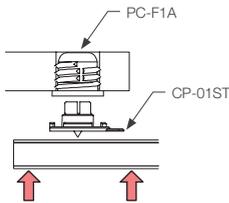

- 2** Drill panel on center mark with CT-09 6mm deep for PC-M1B, 8mm deep for PC-VM1, PC-VMX, PC-M2H

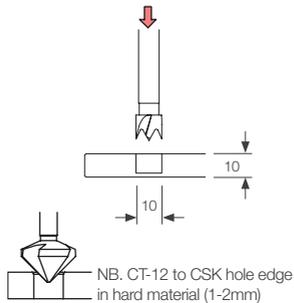


- 3** Screw fit male clip with CT-10. Use battery drill with clutch set.

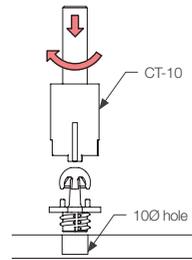


INSTALLING ADHESIVE FIT MALE CLIPS (FIRST COMPLETE STEPS 1 TO 3, PAGE 1)

- 4** Clip PC-SM2 into PC-F1A

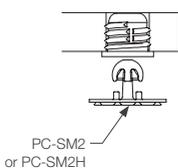

- 5** Apply adhesive to PC-SM2

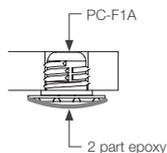

- 5** Place panel and support while adhesive dries

